

Solar DataSnap Firmware Version 46.0.2.0:

New Features:

If synchronization with the thumb drive is interrupted or unable to proceed due to error, the error LED will flash red.

Bug Fixes:

Sometimes the Solar DataSnap will not return to sleep mode after a USB connection is unplugged. This version resolves that.

Known issues:

The USB connection will not resume from sleep/hibernate. If the computer sleeps while connected to the Solar DataSnap, then the USB cable will need to be unplugged and re-plugged to re-establish the USB connection.

Instructions for applying DataSnap firmware upgrade:

1. Download the latest DataSnap firmware upgrade file to your computer somewhere where you can find it. It can be found on our products page at ww.acclima.com/sdiproducts under the Solar DataSnap section. (ACFW_46_0_2_0.WAF)
2. Connect the DataSnap to your USB port
3. Run the SnapView software
4. Choose: Tools -> Upgrade Firmware 5. Press "Select Firmware File", and find where you saved this attachment
6. Press "Begin Upgrade"