

Acclima Solar DataSnap Firmware Version 46.0.2.6:

Newest Feature: If a corruption occurs in the logfile ID, this firmware will automatically detect and correct it. The firmware will also retroactively do this after being applied.

This firmware will also apply the following recent update from the previous version: If synchronization with the thumb drive is interrupted or unable to proceed due to error, the error LED will flash red.

Instructions for applying DataSnap firmware upgrade:

Micro-USB Thumb Drive Method:

Here is the [link to the new firmware](#).

1. Download the firmware file into the Acclima\DataSnap\Updates folder on your thumb drive (should have a micro-USB connector). It can be found on our products page at www.acclima.com/sdiproducts under the Solar DataSnap section.(ACFW_46_0_2_6.WAF)

2. When you are at the Solar DataSnap plug the thumb drive's micro-USB connector into the Solar DataSnap and wait for the lights stop blinking. Once the lights stop blinking (approximately 15 to 20 seconds) you can safely remove the thumb drive.

Direct Connection to PC Method:

Here is the [link to the new firmware](#).

1. Download the latest DataSnap firmware upgrade file to your computer somewhere where you can find it. It can be found on our products page at www.acclima.com/sdiproducts under the Solar DataSnap section.(ACFW_46_0_2_6.WAF)

2. Connect the DataSnap to your USB port (requires cable with micro-USB connection on one side and standard USB A on the other side (included with your Solar DataSnap)).

3. Run the SnapView software

4. Choose: Tools-> Upgrade Firmware

5. Press "Select Firmware File", and find where you saved this attachment

6. Press "Begin Upgrade"